

Digital temperature controller

HANYOUNG NUX

AX series

INSTRUCTION MANUAL

Thank you for purchasing HANYOUNG product.
Please check whether the product is the exactly same as you ordered.
Before using the product, please read this instruction manual carefully.
Please keep this manual where you can view at any time



HANYOUNGNUX CO.,LTD

HEAD OFFICE 28, Gilpa-ro 71beon-gil, Nam-gu, Incheon, Korea
TEL : (82-32)876-4697 FAX : (82-32)876-4696 <http://www.hynux.com>

Safety information

Alerts declared in the manual are classified to Danger, Warning and Caution by their criticality

	DANGER	DANGER indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury
	WARNING	WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury
	CAUTION	CAUTION indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury

DANGER

The electric shock may occur in the input/output terminal so please never let your body and/or conductive substance to be contacted by the input/output terminal.

WARNING

- Since this product is not designed as a safely used device the user must install double safety equipment when this product is used for equipment with possible fatal accident or large property damage.
- The power switch and fuse are not installed on this product so users need to install them separately on the outside. (Fuse rating : 250 V 0.5 A)
- Please supply in the rated power supply voltage in order to prevent this product from breaking down or damaged.
- To prevent electric shock and to prevent malfunction, do not supply the power until the wiring is completed.
- This is not designed as explosion-protective structure so avoid using this product at places where gas inflammability and explosive gases exist.
- Do not supply in the power until all wiring is fully completed in order to prevent the product from breaking down and prevent users from getting electric shock.
- Do not disassemble, manufacture, upgrade and repair the product by yourself. Doing so will break down the product, generate the electric shock and cause malfunction to occur.
- Please turn OFF the product and disassemble the product. Not doing so will break down the product, generate the electric shock and cause malfunction to occur.
- Electric shock may occur when operating this product so please install this product to the panel and use it

CAUTION

- The contents of this manual may be changed without prior notification
- Please check for correct model type and specification
- Please check for any damage or abnormality may caused during shipment.
- Please use this product at following range.
Ambient temperature : -5 ~ 50 °C (when installing them close to each other, max. 40 °C) / humidity : 35 ~ 85 % R.H (but without dew condensation)
- Please avoid the places where corrosive gas (especially noxious gas, ammonia and etc) and inflammable gas exist
- Please do not use this product at places where the vibration or impact is applied directly.
- Please avoid the places where liquid, oil, medical substances, dust, salt or iron contents exist (avoid place of pollution level 1 or 2)
- Do not clean the product with the organic solvent such as alcohols, benzene and etc. (Use neutral detergents)
- Please avoid the places where huge inductive interference exists and places where static electricity/self noise are generated.
- Display's text cannot be seen due to the light of the sun outside or the bright lightning inside.
- Please avoid the places where heat accumulates due to the direct sunlight, radiation and etc
- We recommend using it at altitude below the 2000 m.
- If the device is touched or contacted by water then short-circuit and fire may occur so please inspect the device carefully.
- With the thermocouple input, please use the stated compensation cable.
(Using regular compensation cable will generate the temperature error)
- With the RTD input, please use the cable with less lead-wire resistance and no difference in the resistance among 3-wires. (Using regular cable will generate the temperature error)
- For the input signal wire, please avoid from the power line and load line in order to avoid from the induction noise.
- Separate the input signal wire and output signal wire and if separating them from each other is impossible, then please use the shield wire for the input signal wire.
- For the thermocouple, please use it as the un-grounding type.
(When using the grounding type, malfunction may occur due to the electric leakage)
- When there are too much noises generating from the power, we recommend using the insulation Trans and noise filter. Noise filter must be mounted to the panel or etc that is grounded and please try to make the wiring of output and power terminal meter as short as possible.
- Tightly twisting the power line meter will reduce the noise generation
- If alarm function is not set properly, alarm will not be generated when it should so please check for the operation before running the product.
- When replacing the sensor, please turn OFF the power
- If operation frequency is too high (such as proportional operation and etc) and connecting the maximum rated load to output relay will shorten the life expectancy therefore, please use the auxiliary relay. We recommend using the SSR output type in such cases.
- When using the electrical switch: Set proportional cycle min 20 sec
- When using the SSR: Set proportional cycle min 1 sec
- Do not wire anything to the un-using terminal
- Please check the polarity of terminal before wiring.
- When installing this product to the panel, please use the authorized switch or circuit breaker (authorized by IEC60947-1 or IEC60947-3)
- Please install the switch or circuit breaker close to the operator for users' convenience
- Because switch or circuit breaker is being installed, please make a note on the panel that operating the switch or circuit breaker will block the power.

- We recommend the continuous inspection and repair in order to use it safely for a long period of time.
- Some parts in this product have life expectancy and gets old as time elapses.
- The warranty period is one year including the parts only under the condition where the product is used properly
- It needs the preparation time for contact output when supplying in the power. When applied as signal to the external interlock circuit and etc, please jointly use the delay relay.
- When changing the instrument or if the product broke down, users can replace with the prepared product but even suffix code stays same, operation may differ due to the parameter difference so please check for the compatibility and perform such action.
- Before using a temperature controller, there could be a temperature difference between PV of the temperature controller and the actual temperature so please operate the temperature controller after compensating the temperature difference appropriately.

Suffix code

Model	Code	Information	
AX	<input type="checkbox"/> - <input type="checkbox"/> - <input type="checkbox"/>	Digital temperature controller	
Dimension	2	AX2 : 48 X 96 mm	
	3	AX3 : 96 X 48 mm	
	4	AX4 : 48 X 48 mm	
	7	AX7 : 72 X 72 mm	
	9	AX9 : 96 X 96 mm	
Output selection	1	SSR + Relay1 + Relay2	Relay or SSR as control output(selectable in operator setup mode)
	2	SSR + Relay1 + Relay2 + Relay3	
	1B	SSR + Relay1(Form c) + Relay2	Only for AX2, 3, 7, 9
	2B	SSR + Relay1(Form c) + Relay2 + Relay3	
	3	4 - 20 mA + Relay2	Current output as control output
4	4 - 20 mA + Relay2 + Relay3		
Power supply voltage	A	100 - 240 V AC 50/60 Hz	

※ Form C : Normal close type contact

※ Relay output operates as control output, alarm output and LBA output depending on the internal parameter setting.

Input

Input selection	Multi input (selectable in operator setup mode) • Thermocouple : K, J, R, T (IEC) • RTD : Pt100 Ω(IEC)
Input sampling time	0.1 sec
Input impedance	1 MΩ max
Allowable wiring resistance	10 Ω / 1 wire max (RTD). but resistances among 3 wires should be same
Allowable input voltage	10 V DC max

Performance

Display accuracy	±0.3 % of F.S ±1 digit (In case of R type, ±1.0 % of ±1 digit in the 0 ~ 600 °C range)
Insulation resistance	More than 20 MΩ, 500 V DC for 1min (Primary terminal-Secondary terminal)
Dielectric strength	2300 V AC 50/60Hz, for 1 min (Primary terminal-Secondary terminal)

Range and input code

Classification	Code	Input type	Range	
			Celsius (°C)	Fahrenheit (°F)
Thermocouple	21	K	-100 ~ 1200	-148 ~ 2192
	22		-100.0 ~ 500.0	-148 ~ 932
	J	-100.0 ~ 500.0	-148 ~ 932	
	R	0 ~ 1700	32 ~ 3092	
	T	-100.0 ~ 400.0	-148 ~ 752	
RTD	Pt	Pt100 Ω	-100.0 ~ 400.0	-148.0 ~ 752.0

Control function and output

- Control type : PID control, P control, ON/OFF control
- Auto-tuning : PID operation by the auto-tuning
- ON/OFF control : When PV > SV, it generates 0 % output.
When PV < SV, it generates 100 % output. (Only when control hysteresis is 0)
- Manual reset : Users set within the range from 0 % to 100 %.
- Control output operation : Direct action/Reverse action (selected by the parameter setting)
- Control output : Relay output/voltage pulse output (SSR output) * Selected by the parameter setting

■ Operation mode

Supplying in the power after finish wiring will display the current temperature. Pressing the **MODE** key will display the set temperature and output amount alternatively on the set value (SV) displaying unit.

■ User setup mode

User setup mode is the setting mode that sets the set value that is changed by users frequently such as alarm set value and loop break alarm (LBA). It made the parameter of user setup mode to be displayed on the operator setup mode that allows users to set easily (divided the setting level).

■ SV setting

- In Operator Setup Mode, When the value of **SV** parameter is **on**, you can change the value with **◀**, **▶**, **▲** and press the **MODE** key to set up.
- In operator Setup Mode, When the value of **SV** is **oFF**, you can change the value in **SV** parameter with **◀**, **▶**, **▲** and Press **MODE** key to set up.

Symbol (PV)	Lists	Information	Display condition	Default value (SV)
SV	set temperature	EU 0 ~ 100 %	at all times	EU 0%
RL 1L	Alarm 1 low value	EU 0 ~ 100 % or EUS 0 ~ 100 % (temperature unit)	When RLYn is set	EU 0%
RL 1H	Alarm 1 high value			EU 100%
RL 1d	Alarm 1 dead zone			EUS 0%
RL 2L	Alarm 2 low value			EU 0%
RL 2H	Alarm 2 high value			EU 100%
RL 2d	Alarm 2 dead zone			EUS 0%
LbAL	Loop break alarm time	0 ~ 7200 second	When LBA is set in the RLYn	480
LbALu	Loop break alarm temperature	0 ~ 100 °C (°F)		2
LbAd	Loop break alarm dead zone	0 ~ 100 °C (°F)		2
LoL	KEY LOCK	0 : NO LOCK function	at all times	0
		1 : Operator setup mode LOCK, Auto-tuning prohibited		
		2 : Operator and user setup mode LOCK		

■ Operator setup mode


Operator setup mode is the setting mode that sets the specification of temperature controller when engineer installs it for the first time. Pressing the **MODE** key and **◀** key synchronously in the operation screen or user setup mode will enter into the operator setup **MODE** and **◀** keys one more time for 2 sec will return to the operation screen.

Symbol (PV)	Lists	Information	Display condition	Default value
INP	Input condition	Y1 : K thermocouple (Not display the decimal points) Y2 : K thermocouple (Not display the decimal points) J : J thermocouple r : R thermocouple t : T thermocouple Pt : RTD Pt100 Ω	At all times	Y1
Unit	Temperature unit	°C / °F option	At all times	°C
dP	Decimal point	ON (YES) OFF (NO)	Select decimal point	on
BIAS	Input compensation	-100 ~ 100 (sensor input value + BIAS)	At all times	0
FLT	Input filter time	0 ~ 120 sec	At all times	0
SLH	High setting limitation	EU 0 ~ 100 %	At all times	1200
SLL	Low setting limitation	EU 0 ~ 100 %	At all times	-100
oCtr	Control output type	SSr : SSR operating voltage pulse output rLY : Relay output	When output selection 1 or 2	SSr
SSr	Voltage pulse output type	CYC : Timeshare proportional control PHR : SSR phase control (continuously proportioning)	When selected SSR control output	CYC
Ct	Control output cycle	0 ~ 1000 sec	When SSr is CYC or oCtr is RLY	2
Ctrd	Control output action	rEu : Reverse action (heating control) dir : Direct action (cooling control)	At all times	rEu
Ctrn	Control type	PID : P.I.D control P : P control (proportional control) oNoF : ON / OFF control	At all times	PID
Pb	Proportional band	1 (0.1) ~ EUS 100 %	When it is not ON/OFF control	30
I	Integral time	0 ~ 3600 sec	With PID control	240
d	Derivative time	0 ~ 3600 sec	With PID control	60


nr	Manual reset	0.0 ~ 100.0 %	With P control	500
HYS	Control hysteresis	EUS 0 ~ 100 % (Temperature unit)	With ON/OFF control	2
PO	Output amount with input break	0 ~ 100 %	At all times	00
rLY1	Relay 1 property	non : Not using RL1 : Alarm 1 output RL2 : Alarm 2 output LbA : LBA output	When output selection is 1 or 2 and oCtr is not RLY	non
rLY2	Relay 2 property	non : Not using RL1 : Alarm 1 output RL2 : Alarm 2 output LbA : LBA output	At all times	RL1
rLY3	Relay 3 property	non : Not using RL1 : Alarm 1 output RL2 : Alarm 2 output LbA : LBA output	At all times (Option)	RL2
RLnd	Alarm 1 mode (Alarm 1 or 2)	non : Not using ---[: High alarm]--- : Low alarm	When AL1 or AL2 is set in RLY 1, 2, 3	---[
RLnd	Alarm 2 mode (Alarm 1 or 2)	-[] : Alarm within range]-[] : Alarm not within range]----
RLtY	Alarm 1 type	Rb5 : ABS (Absolute alarm)		Rb5
RLtY	Alarm 2 type	dEu : DEV (Deviation alarm)		
RLHd	Alarm 1 standby mode	oFF : OFF (not using the standby mode)		oFF
RLHd	Alarm 2 standby mode	on : ON (using the standby mode)		0
RLdY	Alarm 1 delay time	0 ~ 9999 sec	oFF	
RLdY	Alarm 2 delay time		oFF	
RLoH	Alarm 1 output LOCK	oFF : Alarm output return action	At all times	oFF
RLoH	Alarm 2 output LOCK	on : Alarm output maintain action		
SV	Change SV on the operation	oFF : No change SV on : Change SV		on

How to disassemble FND from case


● AX4

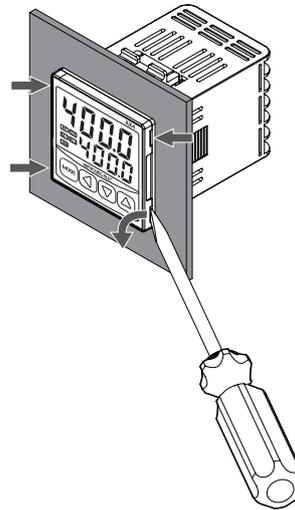


● AX2

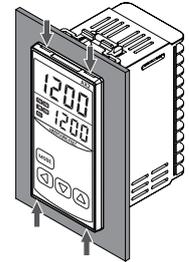


● AX3

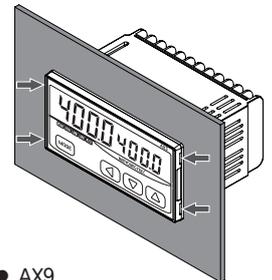

● AX7

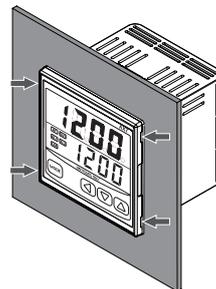


● AX9

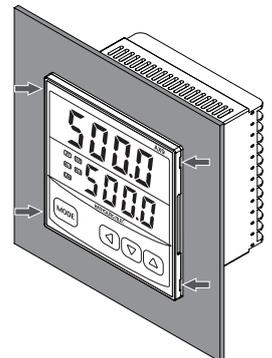


AX2


● Dimension

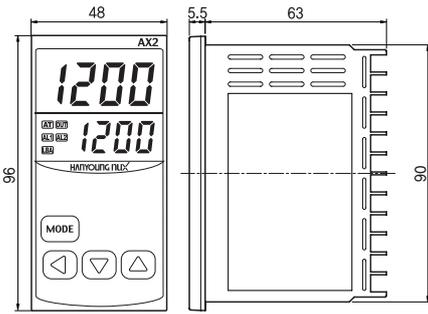

● Panel cutout

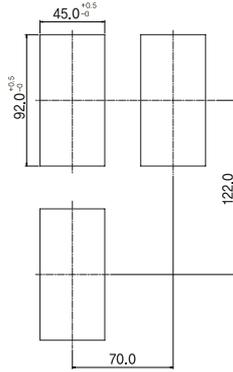


● Connection diagram

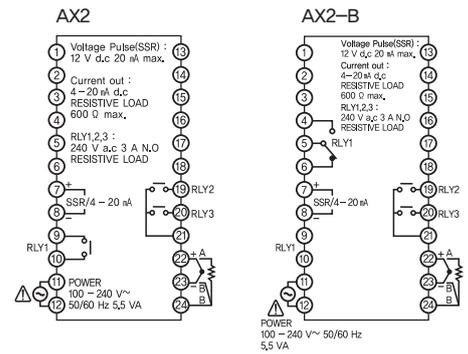


AX3


● Dimension

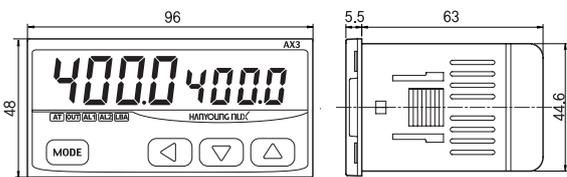

● Panel cutout

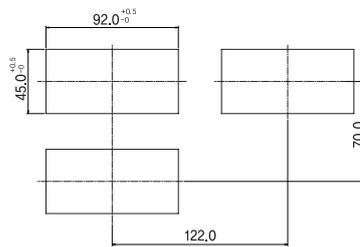


● Connection diagram

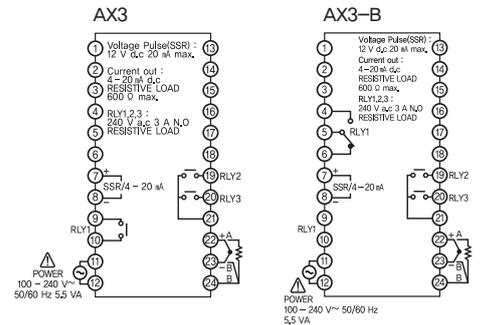


AX4


● Dimension

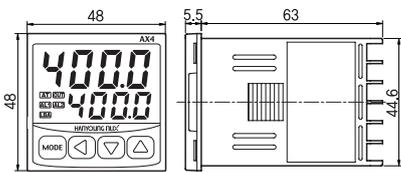

● Panel cutout

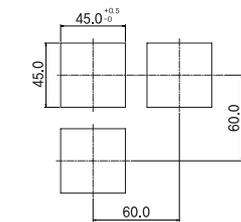


● Connection diagram

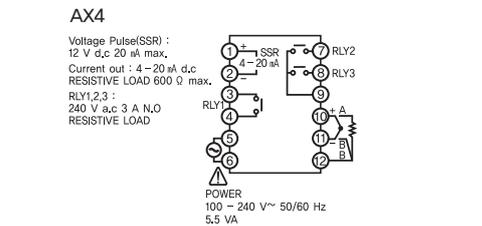


AX7


● Dimension

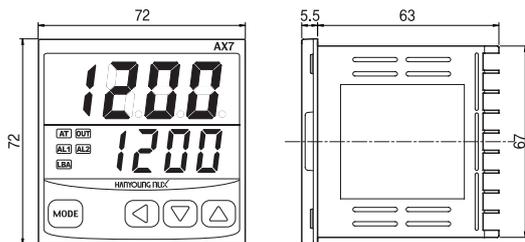

● Panel cutout

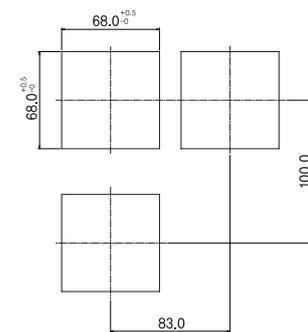


● Connection diagram

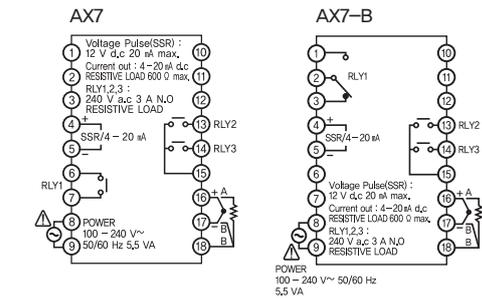


AX9

● Dimension

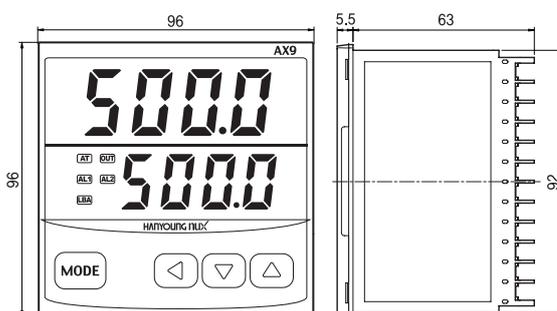

● Panel cutout

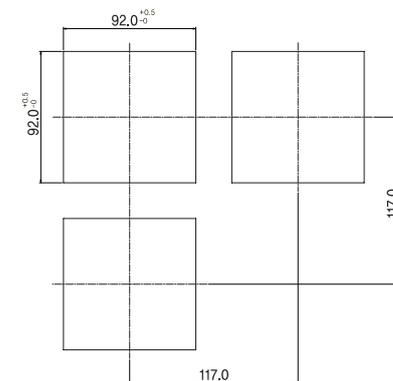

● Connection diagram

